

# Prakash Starter



## Technical Detail

Operational Current AC-3		3-phase AC-2 & AC-3					Model	Contacts		Overload relay (Ordering designation)
220-240V (A)	380-440V (A)	220-240V (Kw)	380-440V (Kw)	500V (Kw)	690V (Kw)	Phase failure protection type	Two heater type			
11	9	2.5	4.0	4.0	4.0	PS-N10KP	PS-N10	-	-	
13	12	3.5	5.5	5.5	5.5	PS-N11KP	PS-N11	-	-	0.24A, 0.35A, 0.5A, 0.7A, 0.9A, 1.3A 1.7A, 2.1A, 2.5A, 3.6A 5A, 6.6A, 9A
13	12	3.5	5.5	5.5	5.5	PS-N12KP	PS-N12	-	1	11A
22	22	5.5	11.0	11.0	7.5	PS-N20KP	PS-N20	-	1	19A
22	22	5.5	11.0	11.0	7.5	PS-N21KP	PS-N21	1	2	0.24A, 0.35A, 0.5A, 0.7A, 0.9A, 1.3A 1.7A, 2.1A, 2.5A, 3.6A 5A, 6.6A, 9A, 11A, 15A
30	30	7.5	15.0	15.0	11.0	PS-N25KP	PS-N25	1	2	22A 29A 35A
40	40	11.0	18.5	18.5	15.0	PS-N35KP	PS-N35	1	2	
55	50	15.0	22.0	25.0	22.0	PS-N50KP	PS-N50	1	2	
65	65	18.5	30.0	37.0	30.0	PS-N65KP	PS-N65	1	2	67A
85	85	22.0	45.0	45.0	45.0	PS-N80KP	PS-N80	1	2	82A 95A
105	105	30.0	55.0	55.0	55.0	PS-N95KP	PS-N95	1	2	15A, 22A, 29,A 35A, 42A, 54A
125	120	37.0	60.0	60.0	60.0	PS-N125KP	PS-N125	1	2	
150	150	45.0	75.0	90.0	90.0	PS-N150KP	PS-N150	1	2	42A, 54A, 67A, 82A, 105A
180	180	55.0	90.0	110.0	110.0	PS-N180KP	PS-N180	1	2	125A
250	250	75.0	132.0	132.0	132.0	PS-N220KP	PS-N220	1	2	82A, 1.5A, 125A, 150A
300	300	90.0	160.0	160.0	200.0	PS-N300KP	PS-N300	1	2	180A, 210A
400	400	125.0	220.0	225.0	250.0	PS-N400KP	PS-N400	1	2	105A, 125A, 150A, 180A, 250
										330A